
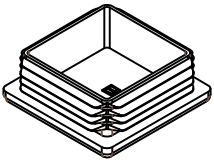



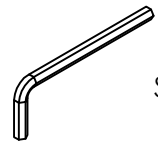


- 1


 25x25 mm x 2
- 2


 40x40 or 50x50 mm x 4
- 3


 M6x12 mm x 8
- 4


 M6x12 mm x 4
- 5

- 6

SW4

ENG - turn the socket screws up to 1/3 into the thread **by hand** to insure, the screw is following the thread precisely. Now use the allen wrench and fix the screws crosswise (head-part right, foot-part left etc.) Fix the screws finally, when the complete bed is in correct position.

DE - Drehen Sie zunächst die Inbus-Schrauben etwa 1/3 **mit der Hand** in die Gewinde um sicher zu stellen, daß die Schrauben exakt den präzisen Gewinden folgen. Ziehen Sie nun mit dem beigelegten Inbus-Schlüssel über Kreuz (Kopfteil rechts, Fußteil links usw.) alle Schrauben an. Wenn das komplette Bett in richtiger Position steht, ziehen Sie nochmals sämtliche Schrauben nach.

Fixing-instruction
 info@h-h-furniture.de
 www.h-h-furniture.de

H 666 2 VA- H 668 - 2 VA
 H 636 2- H 639 2

